

CRT-2A2UK CRT-2A2EU CRT-2A2UK110v





Hydro Fill

CRT-2A2UK CRT-2A2EU CRT-2A2UK110v



INJ-E066 Switch



CRT-070 Hose Output



CRT-040 12V Pump



CRT-095 12V Battery



INJ-E068 Tank Cap



CRT-E200



CRT-E201 Plug Top Charger (EURO)



CRT-E202 Plug Top Charger (UK)



CRT-E203 Plug Top Charger (UK110v)



CRT-E205 Wheel



CRT-E206 Axle Cap



CRT-E207 Axle



CRT-075 Quick Connect Hose fitting




CRT-136 Filter and Ratchet Clamp



CRT-141 Backboard

## Operation

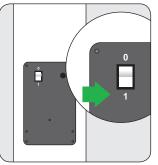




Turn the HydroFill power switch to the ON position.



Fill the battery as required.

**Hydro***Fill*<sup>™</sup> Cordless Watering Cart

## Installation Instructions

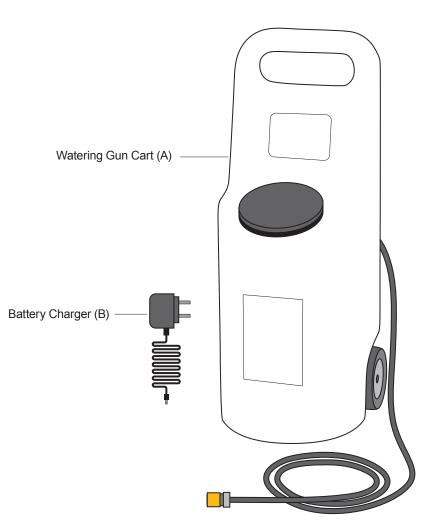

This pack contains:

1 x Cordless Watering Cart (A)

1 x Battery Charger (B)



Once operation is complete ensure that the unit is switched to the OFF position.









**HEALTH AND SAFETY PRECAUTIONS** Batteries contain sulphuric acid, always wear approved protective clothing (gloves, goggles and apron).




## Installation

 
The HydroFill unit is shipped in one carton and is completely assembled. The battery charger is the only part not attached to the cart.

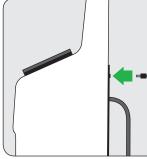




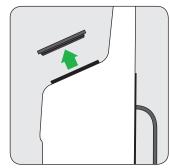


Remove the black cap from the HydroFill tank.

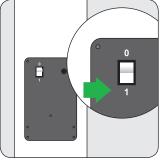


Turn the HydroFill power switch to the ON position.

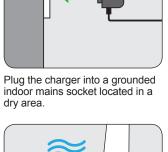

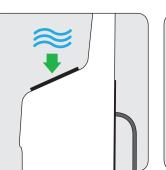


Fill the tank with deionized water.

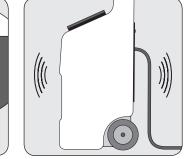


The pump will activate and vibrate briefly (if not, connect the battery as shown on page 3).



The unit will be completely charged after 13 hours (see note on page 3).

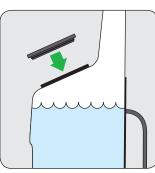


Replace the black cap when the tank is full.

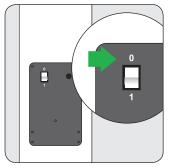


Turn the HydroFill power switch to the OFF position.




and ready for use.

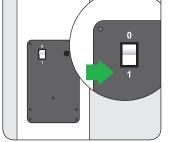


Turn the HydroFill power switch to

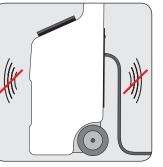


If the pump does not activate and vibrate briefly you will need to connect the battery as follows.

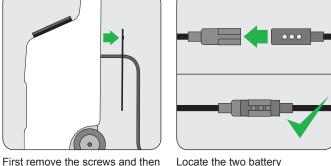

 Locate the two battery connectors and join to make a secure connection.



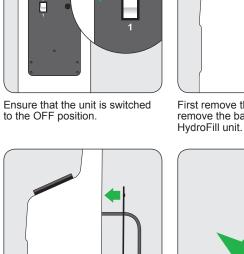

Once complete replace the back cover and secure the screws.



remove the back cover of the

PLEASE NOTE: Although frequent charging will not damage the battery it may shorten the battery's life and so is not recommended. A low battery will cause low water pressure and the Watering Gun may not shut off properly. Always disconnect the charger when not in use.